

If users are properly enrolled in the unit, users will have little to no problems successfully authenticating with the lock. When enrolling a user with a User ID number please keep the user ID number for management use in the future. You will need the User ID number when deleting an individual user.

### Tips for using the Fingerprint Sensor:

- ❖ Apply medium pressure when placing the finger on the scanner, both for fingerprint enrollment and user access.
- ❖ Make sure the "core" of the fingerprint is centered on the scanner. The "core" contains the best biometric information.
- ❖ When registering/enrolling a fingerprint user, please ensure the user's fingerprint is not damaged. Try to select a finger that is not scarred, dry or excessively worn. The ring finger and thumb are generally the best fingers to use with the lock.
- ❖ If the user's finger is dry & cracked we do suggest using some lotion or simply wiping the forehead to get the finger slightly wet.
- ❖ The user should try to place their finger on scanner in the same position as done during registration. This will allow for the best authentication on the lock . If a user has difficulties authenticating, try registering the user's same finger more than once or have the user register a number of different fingerprints.

### Indication beeps:

di-----:	Long Beep	Successful Operation
di-:	Short Beep	Button Pressed
di-di-di:	3 Short Beeps	Operation Failed
di-di-di-di:	4 Short Beeps	Low Battery Warning



## FINGER ACCESS FA6600 LOCK

# User Manual

- ❖ The original (Factory Default) Master Pin-Code is "11111111". Please make sure you change this pin-code to an 8 digit Pin-Code of your choice using the instructions on page 2. Write your new Master Pin-Code down in a safe place as you will need this code to register and delete users.
- ❖ All pin-codes are 8 digits long (both Master Pin-code and all User Pin-Codes)
- ❖ Capacity: 150 Fingerprint users and 75 Pin-Code users.
- ❖ User ID number can be a combination of any 3 digits
- ❖ To activate the lock, you must slide the front body cover up to expose the fingerprint reader and keypad. You have 5 seconds to engage the lock before it goes back into sleep mode which will require you to close the front body cover and reopen to activate the lock again.

## Enrollment of Pin-Code User:

Press: **1 + \* + Master Pin-Code + 3 digits for User ID number + User Pin-Code + User Pin-Code + #**

**Note:** The User ID number is a combination of any 3 digits. The User Pin-Code MUST be 8 digits long.

## Unlocking the Door With a Pin-Code:

Slide up the lock cover then enter your 8 digit Pin-Code to verify and unlock the door.

## Deleting a Pin-Code User:

- ❖ Delete Single Pin-Code User:

Press: **2 + \* + Master Pin-Code + 3 digit User ID number + 3 digits User ID number + #**

- ❖ Delete All Pin-Code User:

Press: **3 + \* + Master Pin-Code + #**

## Modify Pin-Code

This applies to changing the Master Pin-Code and the User Pin-Code

Press: **0 + \* + Original Pin-Code + New Pin-Code + New Pin-Code + #**

## Turn Unlocked Mode On/Off

This is useful for leaving the door unlocked during certain occasions. The same process turns the Unlocked Mode on and off.

Press: **\* + \* + Master Pin-Code + #**

## Restore Factory Default Settings:

- 1) Remove lock from door.
- 2) Inside the outer component of the lock, behind the fingerprint sensor, is a reset switch.
- 3) With the batteries connected, press and hold the reset button for 3 seconds. The lock is now restored to factory default settings.

## Enrollment of Fingerprint User:

- ❖ Enroll by User ID number:

Press: **1 + # + Master Pin-Code + 3 digit User ID number + # + desired fingerprint + desired fingerprint**

**Note:** To add additional users after the initial enrollment (indicated by the first long beep) close the protective cover and repeat process.

- ❖ Enroll Random Fingerprints (not tagged to a User ID number):

Press **1 + # + Master Pin-Code + # + desired fingerprint**

**Note:** After each successful enrollment the lock will attempt to enroll additional fingerprints until the slide cover is closed. Therefore, you may quickly enroll several people or several fingers without re-entering the above code.

## Deleting a Fingerprint User:

- ❖ Delete desired user by User ID number:

Press: **2 + # + Master Pin-Code + 3 digit User ID number + 3 digits User ID number + #**

- ❖ Delete all users:

Press: **3 + # + Master Pin-Code + #**

## Unlocking the door with an enrolled fingerprint:

Slide the cover of the lock upward and place the enrolled finger on the sensor just as it was placed during enrollment. A single beep will indicate that the authentication was successful.